




# Solution Hybrid LLC

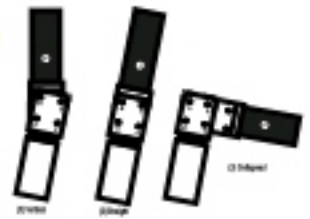

## Installation Instructions for the PET Handlebar Hinge.

**Attention: If you are uncomfortable working with tools or any aspect of this procedure, please take your GoPet to a bicycle shop to have the hinge installed!**

- (1) First loosen the GoPet aluminum riser bar clamp, (located just above the steering knuckle) and remove the handlebar riser assembly. (This may require moving the handlebars from side to side). Place it gently.
- (2) Place the large fiber washer (provided with the kit) over the exposed threaded stem so it lays on top of the adjustment nuts.
- (3) With a sharp hacksaw, cut off the threaded stem flush with the top of the fiber washer using the washer as a guide to make a square cut.
- (4) Loosen the set screw on the handlebar height adjustment clamp, release and remove the handlebars and clamp from the top of the old handlebar riser.  
Be careful not to pull on the wiring harness!
- (5) Install them on the new hinge/riser assembly (this may require spreading the clamp to fit the new riser tube).  
Replace the set screw with the new set screw and nut provided, adjusting them so the handlebar slides freely in the riser assembly. Tighten the nut and clamp.
- (6) Slide the hinge end of the assembly into the remaining stem of the GoPet until it bottoms out at the hacksaw cut.  
If the hinge does not insert easily into the yoke, it may be necessary to remove some of the weld from the inside of the tube or aluminum on the hinge assembly at the weld position.
- (7) With the hinge in the lowered position, align the riser assembly parallel to the front wheel and tighten the internal allen screw in the center of the lower portion of the hinge.
- (8) **Make sure you check to see that the installation is sufficiently tightened before riding your GoPet!**
- (9) The installation is now complete.